



SKU # 1001 358 775
YOW SKU # 693 323
Model # TY499-1514

USE AND CARE GUIDE

5 ft LED Twinkling Tinsel Carriage



THANK YOU

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 5 ft LED Twinkling Tinsel Carriage. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

Guarantee

What is Covered

The product is intended for residential seasonal use for approximately 90 days per year. This product is covered by a 90 day limited guarantee due to defects in material and workmanship. Return the product with purchase receipt to the location of purchase for refund within 90 days of purchase.

What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

1-877-527-0313

 
HOMEACCENTSHOLIDAY.COM

Pre-Assembly

PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on a flat surface. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Contact our customer service center or return to store. Assembly of this product may require more than one person.

PACKAGE CONTENTS

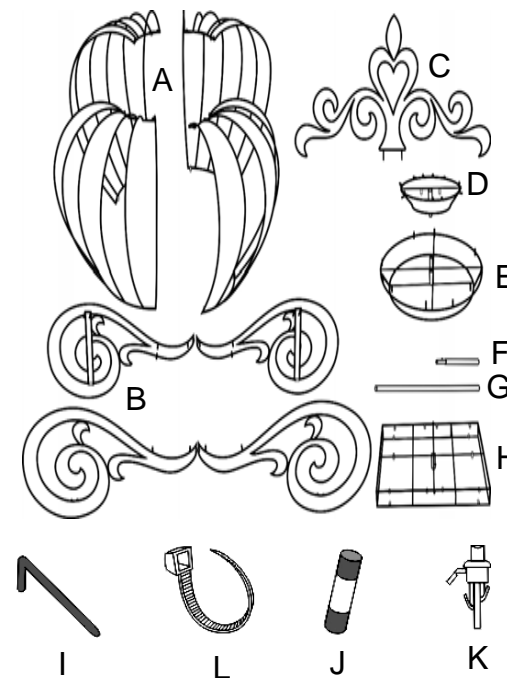


Package Contents/Parts List		
Part	Description	Quantity
A	Panels of Pumpkin Carriage	4
B	Chassis of Pumpkin Carriage	4
C	Decorative Topper	1
D	Round Top Carriage Connector	1
E	Round Bottom Carriage Connector	1
F	Short Support Pole	1

Package Contents/Parts List		
Part	Description	Quantity
G	Long Support Pole	1
H	Base Platform of Carriage	1
I	Ground Stakes	4
J	Spare Fuse	2
K	Spare Bulb	10
L	Plastic Ties	10

Assembly

 Assembling the TWINKLE Pumpkin Carriage

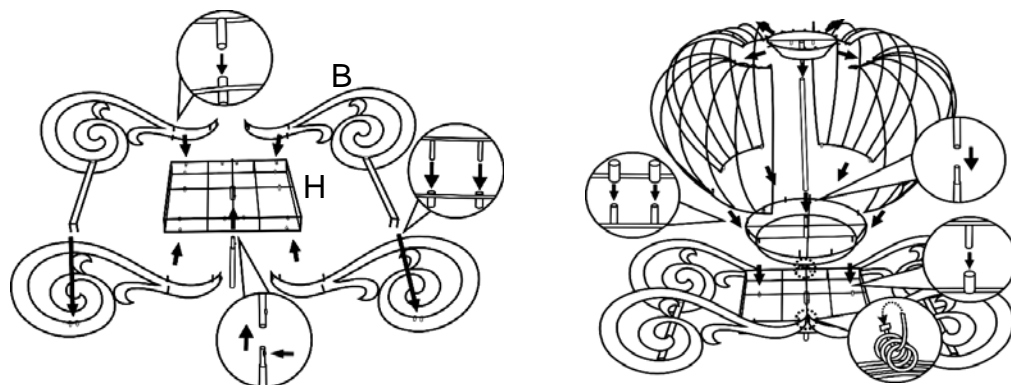


Step 1. Insert the two rods on each Chassis (B) into the matching holes on the sides of the Base Platform of Carriage (H). Secure the Chassis to the Base Platform with the Plastic Ties (L). Hook the horizontal bar attached to one side of the Chassis into the matching holes on the opposite side Chassis. Insert the tapered end of the Short Support Pole (F) into the matching hole on the underside of the Base Platform of the Carriage (H). (FIG.1)

Step 2. Attach the Round Bottom Carriage Connector to the Base Platform of Carriage. Secure with Ties. (FIG.1)

Step 3. Stack the Long Support Pole (G) onto the rod coming from the center of the Round Bottom Carriage Connector (E) then attach the top end of the Pole to the bottom of the Round Top Carriage Connector (D). Note: Make sure the Round Top Carriage Connector has the holes on top in line with the Carriage not side ways. This has to accept the Decorative Topper (C) in the correct direction. (FIG.2)

 Step 4. Insert the posts coming from the Round Top and Bottom Carriage Connectors (D&E) into the matching holes on each Panel of the Pumpkin Carriage (A) and secure tightly with the Plastic Ties. (FIG.2)

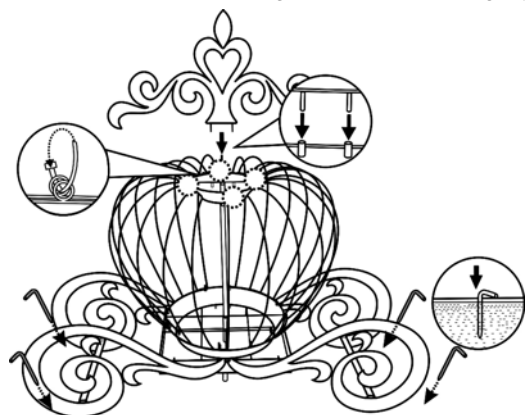

Step 6. Insert two poles on the Decorative Topper (C) into the holes in the Round Top Carriage Connector (D). (FIG.3)

Step 7. Secure the Pumpkin Carriage to the ground with the Ground Stakes (I). (FIG.3)

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

CAUTION: The lighting string on this product is rated at 38.4 Watts (0.32 Amps). Do not overload. Do not connect to other lighting strings, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Return to Store or discard if the product has cuts, damage or frayed wire insulation on cords, cracks in the socket enclosures, loose connections or exposed copper wire.

Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product, wire and lighting connections. If the product is placed somewhere other than the ground it should be well secured and stable.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

FOR INDOOR AND OUTDOOR USE